


Upstand Guide



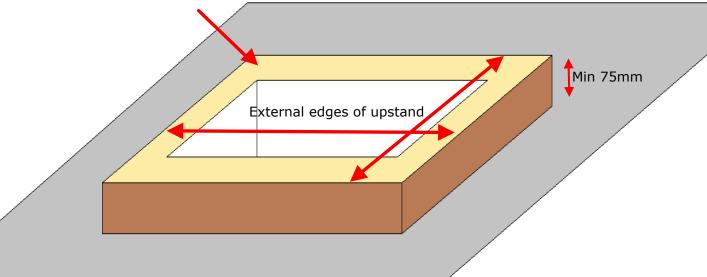

IMPORTANT NOTE

EXTERNAL DIMENSIONS

Measure opening from the EXTERNAL edges of your upstand.

EXTERNAL edges of upstand dimensions required

Upstand width and depth must be EQUAL for a Pyramid uptand.

