 


Assembly Instructions

 
Base

Lid

- 1** bend two long sides,
then bend back flat
bend against a straight edge e.g. ruler.



- 2** bend two short sides,
then bend back flat



- 3** push in corner sections
easier if you bring the joining short & long sides up at the same time.



 
- 4** the base should now
look like this



- 5** fold ends right over
& bend back out
make sure the two folds that are close together are well & evenly bent.




- 6** push in corners & fold
flap up & over



- 7** press in both corners
to click in place
complete the other side



 
- 1** pre-bend to begin with
imagine this shape is to fit inside an invisible bowl.




- 2** fold ends right over
& bend back out
make sure the two folds that are close together are well & evenly bent



 
- 3** bend in sides



- 4** push tab into slot

 

- 5** fold flap up & over

 


- 6** press in both corners
to wedge in place
complete the other side




other features...

Locking Lid

 - 1** close lid normally




 - 2** fold lid tags into
lower slots on base




Raising Lid

 - 1** raise lid to correspond
with upper base slots



 - 2** fold lid tags into
upper slots on base



Please ensure you do not puncture the bag in the EVO Midi
The Eco bag's waterproof qualities reduce after 24-48 hours
Keep bags cool & dry, in an airtight container or bag

If you wish to attach ribbons, punch out the 4 holes in the lid. Lift only when lid is locked to base.