


Brief and handy... everything your dishwasher needs ...
Before using for the first time, read the Installation Instructions and Operating Instructions!

1

Adjusting the water softening system *


Water hardness supply company what the water is and either ...	Water hardness range	Hardness range mmol/l	Factory setting
0-8	soft	0-1.1	H:00
9-10	soft	1.2-1.4	H:01
11-12	medium	1.5-1.8	H:02
13-15	medium	1.9-2.1	H:03
16-20	medium	2.2-2.9	H:04
21-26	hard	3.0-3.7	H:05
27-38	hard	3.8-5.4	H:06
39-62	hard	5.5-8.9	H:07

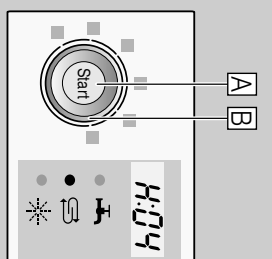

Quickly sorted ...


How to adjust

- Switch on ON/OFF switch.
- Press and hold down the START button A.
- Rotate programme selector B until H:0. is indicated on the digital display.
- Release button.
- The factory set value H:04 is lit on the digital display.
- Rotate programme selector B until the required value is indicated on the digital display.
- Press START button A.
- The set value is saved.

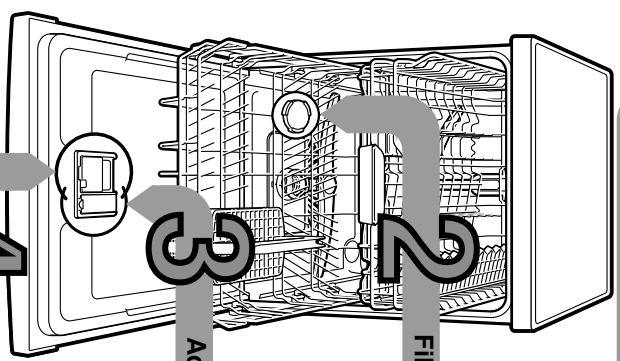


Filling the salt dispenser


Dissolves limescale (not necessary for set value 0) ...

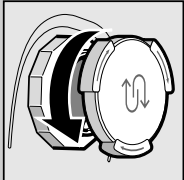


Unscrew the cover.

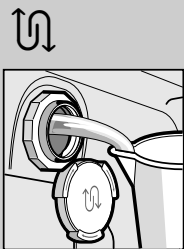

Fill the salt dispenser with water before the first wash only.

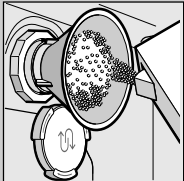


Add special salt (never add detergent!).

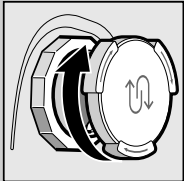


Screw on the cover. Wash immediately.

Adding rinse aid


Spick and span ...

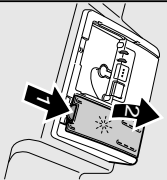

Press mark 1, lift up cover 2.

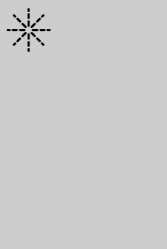


Fill in rinse aid.

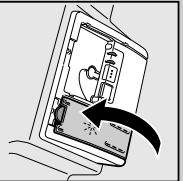

Screw on the cover. CLICK!

Adding detergent


A lot of dirt, a lot of detergent ...

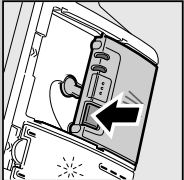


If required, open the cover (press button).




Attention: Combinations are not suitable for all programmes, follow manufacturer's instructions.

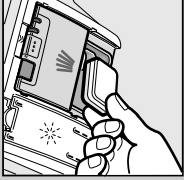

50 ml

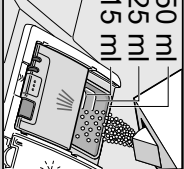


25 ml

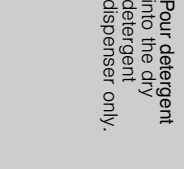

15 ml

Pour detergent into the dry detergent dispenser only.

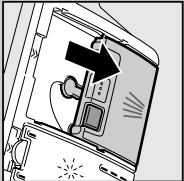

Slide cover shut, press. PLOPI

Switching on the appliance

Select programme

Quick, economical or intensive ...

Overview of programmes
 The max. possible number of programmes is illustrated in this overview. The corresponding programmes for your appliance can be found on the fascia.

The programme data has been measured in the laboratory according to European standard EN 50242. Deviations are possible in practice.
 * half normal load

	Intensive 70°	Normal 65°	Eco 50°	Gentle 40°	Quick 45°	PreRinse
Duration: hrs. : mins	→	→	→	→	→	→
Energy consumption in kWh	→	→	→	→	→	→
Water consumption in litres	→	→	→	→	→	→
	0.29*	0.29*	0.29*	0.29*	0.29*	0.15
	0.80	0.80	0.80	0.80	0.80	0.05
	10	10	10	10	10	4

Additional options **

Express Wash/Speed Perfect (VarioSpeed) ... is obtained by increased energy consumption at a constant cleaning performance.

Half load ... for a few items, saves water, energy and time.

Intensive zone ... perfect for washing pressure and washing temperature are increased slightly.


Hygiene ... the temperature is increased during the final rinse process. This increases the hygiene status.

Extra drying ... improves the drying result by increased temperature in the final rinse. (Please take care with delicate dishes.)

Flexibility ...

Start programme Here we go ...

Switch off the appliance Everything o.k. ...

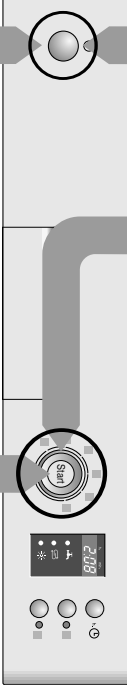

9

5

4

3

2


6

8


7

** depending on model


Filters ... check, if required, clean.

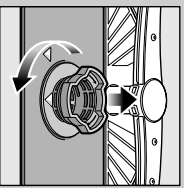


Rotate filter cylinder, remove filter system ...

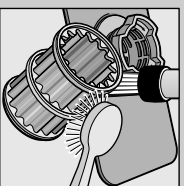

rinse under running water ...

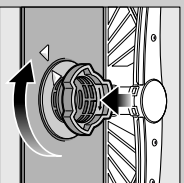


insert ...

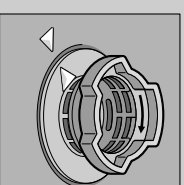


Screw on filter system
NOTE
MARK!

- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- insert filters.


Spray arms ... Remove blockages/ deposits.

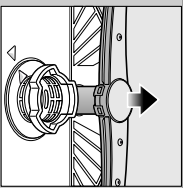


pull lower arm upwards ...

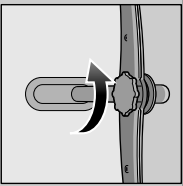


unscrew upper arm ...

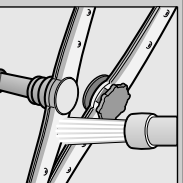


clean spray nozzles under running water (if required use toothpicks) ...

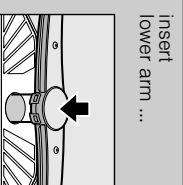

insert lower arm ...

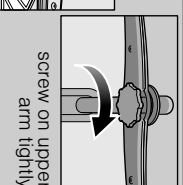

screw on upper arm tightly

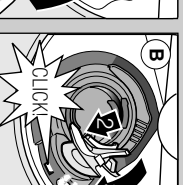

Rectifying minor faults yourself ...

... as it is worth doing it yourself!

More information can be found in the operating instructions

 
Fault

Possible causes

Remedial action

Display “E” is lit

Supply fitting jammed or calcified



- ▶ Open supply fitting.
- ▶ 1. Unscrew water connection.
- ▶ 2. Clean filter in the water connection.
- ▶ 3. Flow rate must be min. 10 l/min., when water supply is open. If the flow rate is less, replace the supply fitting.
- ▶ Install supply hose without kinks.

Display “E22”

Filters are soiled or blocked

Display “E24” and “E” are lit

Waste water hose is blocked or kinked
Cover not attached to waste water pump

- ▶ Clean the filters (see above).
- ▶ Install waste water hose without kinks.
- ▶ Attach cover (see above).

Display “E25” and “E” are lit

Waste water pump blocked

Other fault display “E:XX” is lit

Appliance has technical defect

Residual water in the appliance

The programme has not yet ended

Rust on the cutlery

Cutlery not rust-resistant
Hard knife blades are more susceptible
Extraneous rust

- ▶ Use dishwasher-proof cutlery.
- ▶ Never wash rusting parts in the appliance.

Terminating the programme ...

While the programme is running, press the START button for approx. 3 sec. (Reset).



The numerical display indicates “0:01”, approx. 1 minute after the programme ends, “0:00” is indicated.



Switch off the appliance.


Fault

Possible causes

Remedial action

Utensils are not clean

Sand or gritty residue on the utensils

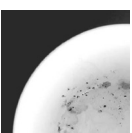

Utensils are situated close together or one above the other
Too little detergent
Unsuitable programme selected
Spray arm nozzles blocked
Filters dirty, not seated firmly
Spray arms blocked

- ▶ Separate the utensils, prevent contact points.
- ▶ Follow manufacturer's instructions (detergent).
- ▶ Select a more intensive programme.
- ▶ Clean the spray arms (see above).
- ▶ Clean the filters (see above).
- ▶ Arrange the utensils so that the spray arms can rotate freely.

Stains and streaks

Rinse aid dosage too high/ too low

Streaks: reduce dosage.
Water or limescale stains: increase dosage.

Utensils not dry

Rinse aid

The combined detergent used has a poor drying performance
Appliance setting

Activate intensive drying (depending on model).

Milky deposits on the utensils (can be removed)

Water softening system incorrectly set
No salt

- ▶ Correctly set water softening system.
- ▶ Refill with special salt.

Milky deposits, glasses cloudy/farnished (cannot be removed)

Glasses not dishwasher-proof

- ▶ Use dishwasher-proof glasses.
- ▶ Use a detergent suitable for glasses.

Plastic/utensils discoloured

Too little detergent
Discoloration caused by food colourings (tomato sauce)

- ▶ Follow manufacturer's instructions (detergent).
- ▶ Discoloration is harmless, subsequent rinse cycles will cause it to fade.

Loading the dishwasher correctly ...

Dishwasher-proof utensils (not soiled with ash, wax, lubricating grease, ink or adhesive labels; remove large remnants of jam, milk products and food according to the operating instructions and check that the spray arms can rotate freely).